



12. EXPLODED VIEW & REPLACEMENT PART LIST

12.1 EXPLODED VIEW

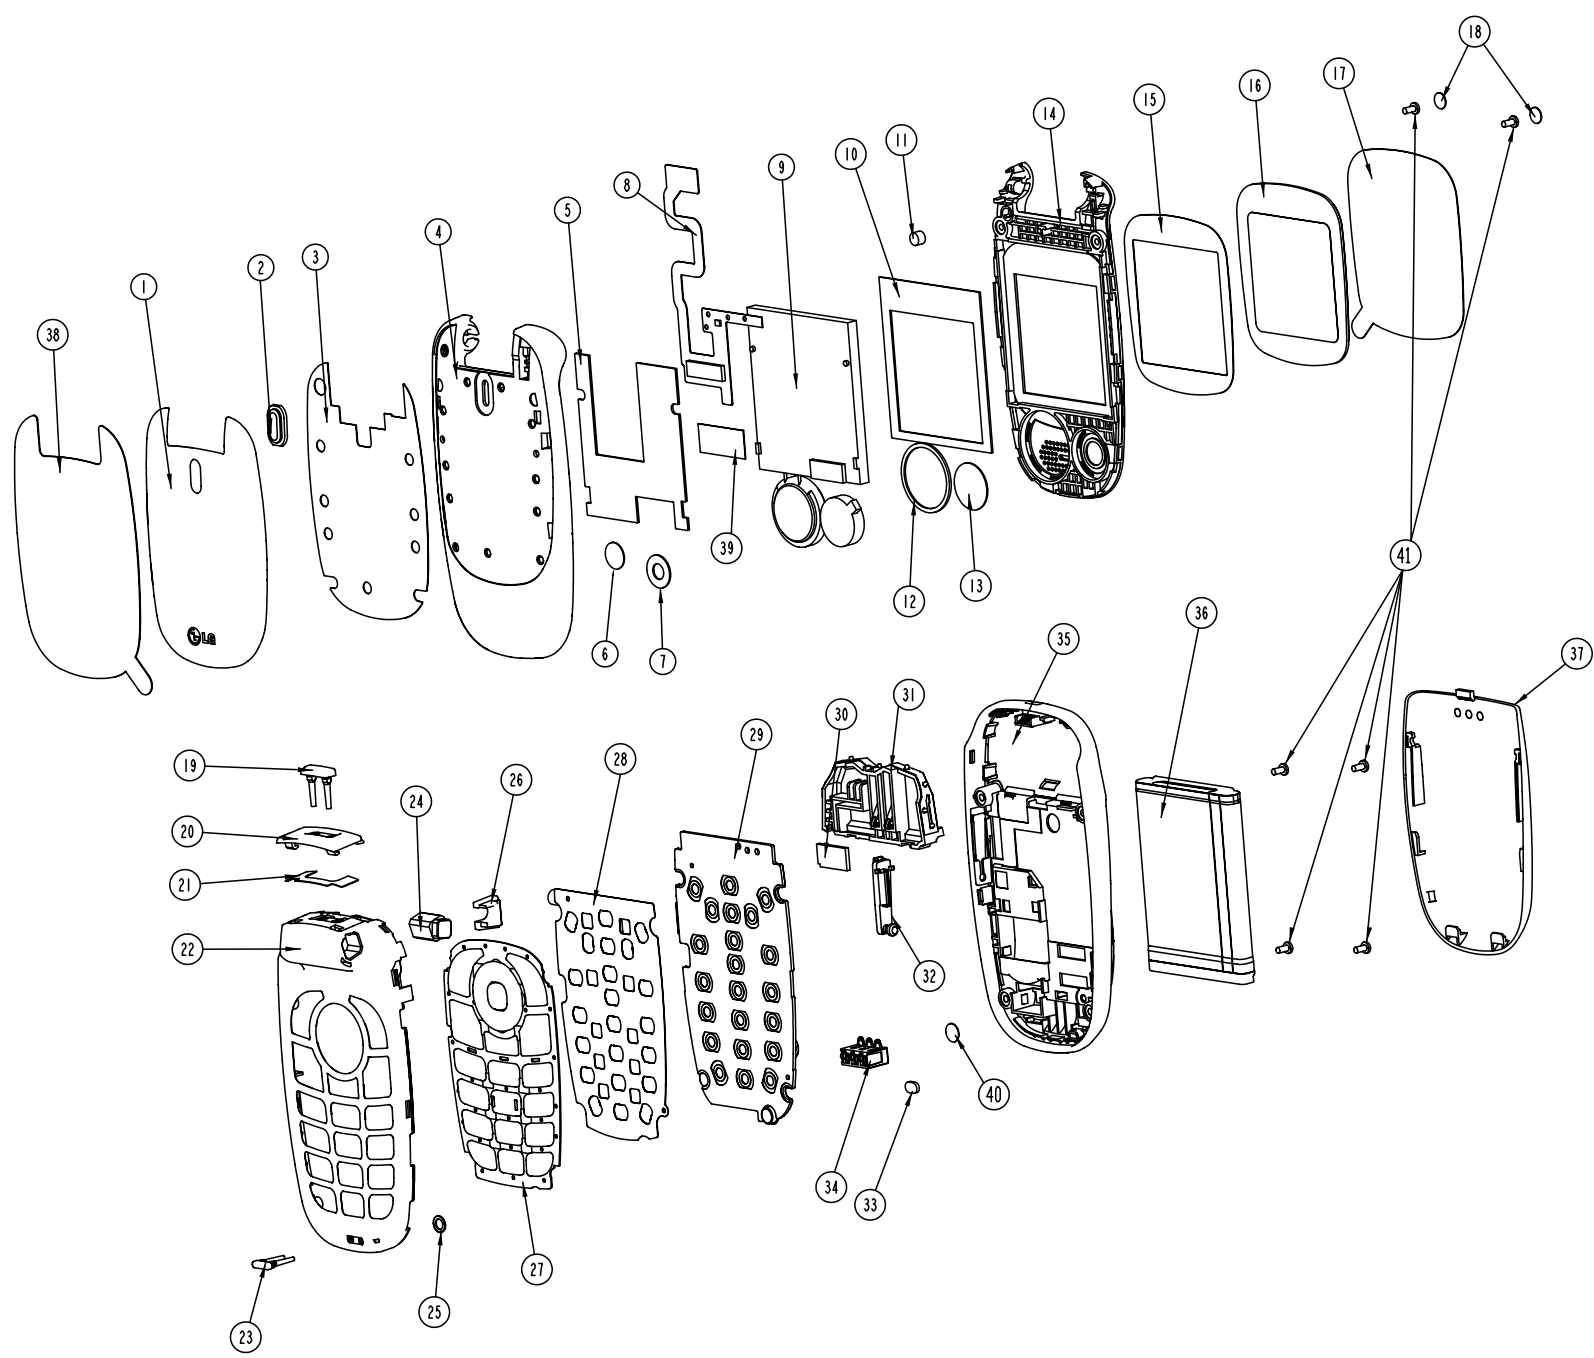


41	SCREW	6	GMEY0002001	
40	A/S LABEL	1	MLAB0001102	
39	TAPE, FPCB	1	MTAJ0002001	
38	TAPE, PROTECTION DECO	1	MTAB0179501	
37	COVER,BATTERY	1	MCJA0044401	
36	BATTERY PACK,LI-ION	1	SBPL0089504	
35	COVER,REAR	1	MCJN0068501	
34	BATT CONNECTOR	1	ENZY0015701	
33	PAD,MIKE<REAR>	1	MPBH0030701	
32	CAP,EARPHONE JACK	1	MCCC0045401	
31	ANTENNA	1	SNGF0026201	
30	PAD,FPCB,CONNECTOR	1	MPBF0021701	
29	PCB,ASSY MAIN	1	SAFY0210802	
28	DOME ASSY,METAL	1	ADCA0067001	
27	BUTTON,DIAL	1	MBJA0024501	
26	STOPPER,HINGE	1	MSGB0019901	
25	PAD,MIKE	1	MPBH0030701	
24	HINGE,FOLDER	1	MHFD0013702	
23	STOPPER,FOLDER	1	MSGB0019801	
22	COVER,FRONT	1	MCJK0072301	
21	TAPE,DECO HINGE	1	MDAG0028001	
20	DECO,HINGE	1	MDAG0028001	
19	STOPPER,HINGE	1	MSGB0019801	
18	CAP,SCREW	2	MCCH0107301	
17	TAPE,PROTECTION	1	MTAB0174501	
16	WINDOW,LCD	1	MWAC0080201	
15	TAPE,WINDOW	1	MTAD0069401	
14	COVER,FOLDER<LOWER>	1	MCJH0039301	
13	PAD,MOTOR<LOWER>	1	MPBG0062201	
12	FILTER,SPEAKER	1	MPBN0043101	
11	MAGNET,SWITCH?	1	MMAA0005201	
10	PAD,LCD<LOWER>	1	MPBG0062201	
9	LCD	1	SVLM0024701	
8	FPCB	1	SACY0061201	
7	PAD,MOTOR<UPPER>	1	MPBJ0044701	
6	PAD,SPEAKER	1	MPBN0041701	
5	PAD,LCD<UPPER>	1	MPBG0062301	
4	COVER,FOLDER<UPPER>	1	MCJJ0048701	
3	TAPE,DECO	1	MTAA0137201	
2	INDICATOR,LED	1	MIAA0021501	
1	DECO,FOLDER	1	MDAE0040001	
NO.	DESCRIPTION	Q'TY	DRAWING NO.	REMARK

ASS'Y EXPLODED VIEW

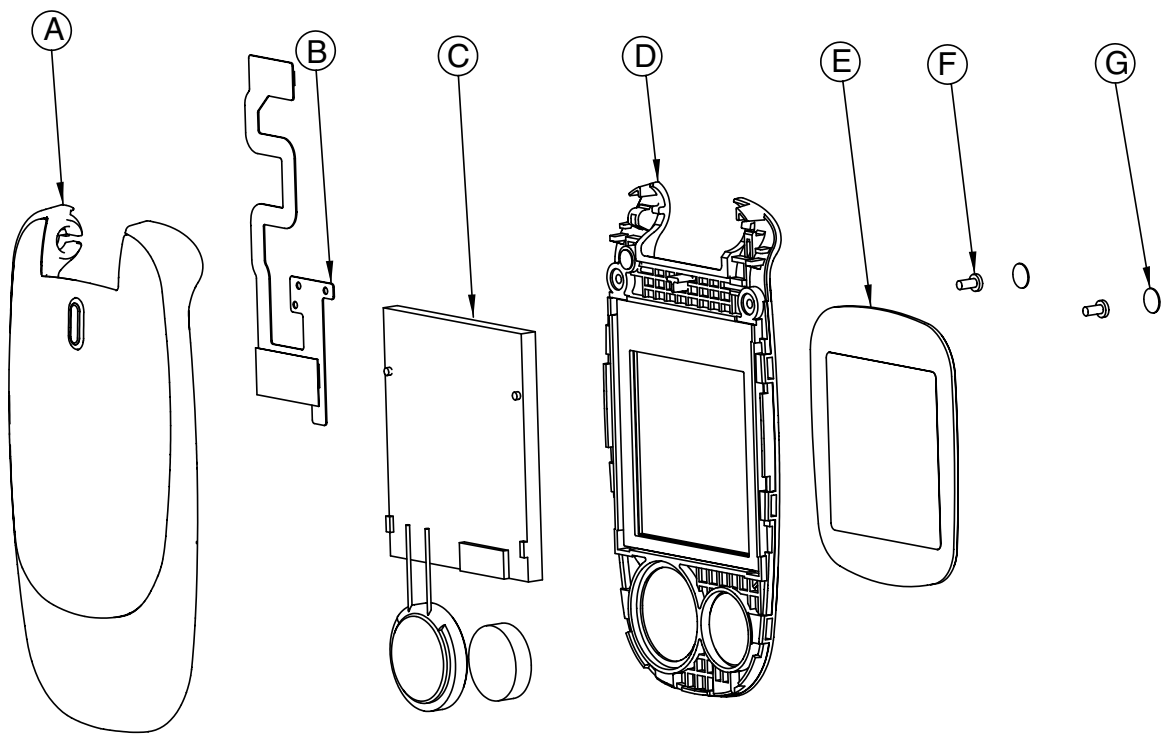

P	COVER,BATTERY	1	MCJA0044401	
O	BATTERY PACK,LI-ION	1	SBPL0089504	
N	COVER ASSY,REAR	1	ACGM0091201	
M	PCB ASSY,MAIN	1	SAFY0210802	
L	DOME ASSY,METAL	1	ADCA0067001	
K	BUTTON,DIAL	1	MBJA0024501	
J	STOPPER,HINGE	1	MSGB0019901	
I	HINGE,FOLDER	1	MHFD0013702	
H	COVER ASSY,FRONT	1	ACGK0089901	
G	CAP,SCREW	2	MCCH0107301	
F	SCREW	6	GMEY0002001	
E	WINDOW,LCD	1	MWAC0080201	
D	COVER ASSY,FOLDER<LOWER>	1	ACGH0049301	
C	LCD	1	SVLM0024701	
B	FPCB	1	SACY0061201	
A	COVER ASSY,FOLDER<UPPER>	1	ACGJ0064301	
NO.	DESCRIPTION	Q'TY	DRAWING NO.	REMARK

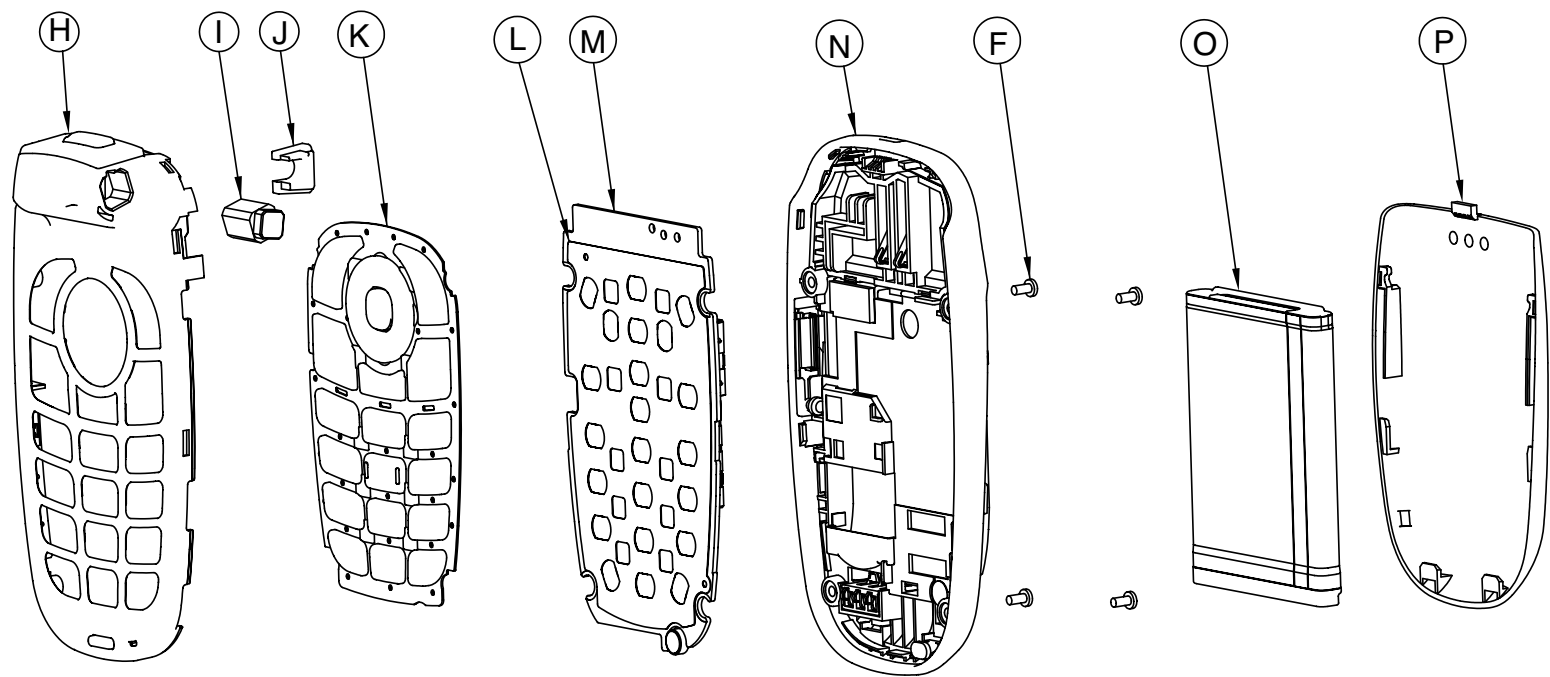

## 12. EXPLODED VIEW & REPLACEMENT PART LIST

### 12.2 Replacement Parts <Mechanic component>

**Note:** This Chapter is used for reference, Part order is ordered by SBOM standard on GCSC

Level	Location No.	Description	Part Number	Spec	Color	Remark
1		GSM(FOLDER)	TGFF0097701		Black	
2	AAAY00	ADDITION	AAAY0247801		Black	
3	MCJA00	COVER,BATTERY	MCJA0044401	MOLD, PC LUPOY SC-1004A, , , ,	Black	P, 37
2	APEY00	PHONE	APEY0423302		Black	
3	ACGG00	COVER ASSY,FOLDER	ACGG0083301		Black	
4	ACGH00	COVER ASSY,FOLDER(LOWER)	ACGH0049301		Black	D
5	MCJH00	COVER,FOLDER(LOWER)	MCJH0039301	MOLD, PC LUPOY SC-1004A, , , ,	Black	14
5	MMAA00	MAGNET,SWITCH	MMAA0001601	7100 magnetic	Silver	
5	MPBG00	PAD,LCD	MPBG0062201	COMPLEX, (empty), , , ,	Without Color	13
5	MPBJ00	PAD,MOTOR	MPBJ0048201	CUTTING, NS, , , ,	Without Color	
5	MPBN00	PAD,SPEAKER	MPBN0043101	COMPLEX, (empty), , , ,	Without Color	
5	MTAD00	TAPE,WINDOW	MTAD0069401	COMPLEX, (empty), , , ,	Without Color	15
4	ACGJ00	COVER ASSY,FOLDER(UPPER)	ACGJ0064301		Black	A
5	MCJJ00	COVER,FOLDER(UPPER)	MCJJ0048701	MOLD, PC LUPOY SC-1004A, , , ,	Silver	4
5	MDAE00	DECO,FOLDER(UPPER)	MDAE0040001	MOLD, PC LUPOY SC-1004A, , , ,	Black	1
5	MIAA00	INDICATOR,LED	MIAA0021501	COMPLEX, (empty), , , ,	Without Color	2
5	MPBG00	PAD,LCD	MPBG0062301	COMPLEX, (empty), , , ,	Without Color	5
5	MPBJ00	PAD,MOTOR	MPBJ0044701	COMPLEX, (empty), , , ,	Without Color	9
5	MPBN00	PAD,SPEAKER	MPBN0041701	COMPLEX, (empty), , , ,	Without Color	6
5	MTAA00	TAPE,DECO	MTAA0137201	COMPLEX, (empty), , , ,	Without Color	3
5	MTAB00	TAPE,PROTECTION	MTAB0179501	COMPLEX, (empty), , , ,	Without Color	38
4	ACGK00	COVER ASSY,FRONT	ACGK0089901		Black	H
5	MCJK00	COVER,FRONT	MCJK0072301	MOLD, PC LUPOY SC-1004A, , , ,	Black	22
5	MDAG00	DECO,FRONT	MDAG0028001	MOLD, PC LUPOY SC-1004A, , , ,	Silver	21
5	MFBD00	FILTER,MIKE	MFBD0023701	COMPLEX, (empty), , , ,	Without Color	
5	MSGB00	STOPPER,HINGE	MSGB0019801	MOLD, Urethane Rubber S190A, , , ,	Silver	19,23
5	MSGC00	STOPPER,FOLDER	MSGC0000601	MOLD, Urethane Rubber S190A, , , ,	Black	
5	MTAA00	TAPE,DECO	MTAA0139101	COMPLEX, (empty), , , ,	Without Color	
4	GMEY00	SCREW MACHINE,BIND	GMEY0002001	1.4 mm,3 mm,MSWR3(BK) ,B ,+ ,HEAD t=0.6, HEAD d2.7		
4	MCCH00	CAP,SCREW	MCCH0107301	COMPLEX, (empty), , , ,	Black	18,G
4	MHFD00	HINGE,FOLDER	MHFD0013702	COMPLEX, (empty), , , ,	Without Color	I,24
4	MIDZ00	INSULATOR	MIDZ0136901	COMPLEX, (empty), , , ,	Without Color	

## 12. EXPLODED VIEW & REPLACEMENT PART LIST

Level	Location No.	Description	Part Number	Spec	Color	Remark
4	MRDY00	REINFORCE	MRDY0000601	COMPLEX, (empty), , , , ,	White	
4	MSGB00	STOPPER,HINGE	MSGB0019901	MOLD, PC LUPOY SC-1004A, , , , ,	Silver	J
4	MTAB00	TAPE,PROTECTION	MTAB0174501	COMPLEX, (empty), , , , ,	Without Color	17
4	MTAJ00	TAPE,FLEXIBLE PCB	MTAJ0002001	COMPLEX, (empty), , , , ,	Without Color	39
4	MWAC00	WINDOW,LCD	MWAC0080201	CUTTING, PMMA MR 200, , , , ,	Black	16,E
4	SACY00	PCB ASSY,FLEXIBLE	SACY0061201			B
5	SACE00	PCB ASSY,FLEXIBLE,SMT	SACE0055601			
6	SACC00	PCB ASSY,FLEXIBLE,SMT BOTTOM	SACC0034901			
7	CN1	CONNECTOR,BOARD TO BOARD	ENBY0040601	30 PIN,0.4 mm,ETC , , H=1.0 ; , , 0.40MM ,STRAIGHT ,MALE ,SMD ,R/TP , ,		
6	SACD00	PCB ASSY,FLEXIBLE,SMT TOP	SACD0045501			
7	CN2	CONNECTOR,FFC/FPC	ENQY0013901	35 PIN,0.3 mm,STRAIGHT , , , ; , , 0.30MM ,FPC ,STRAIGHT ,BOTH ,SMD ,R/TP ,[empty] ,		
7	LD1	DIODE,LED,CHIP	EDLH0007901	RED ,1608 ,R/TP ,Indicator,0.4T Red LED		
7	LD2	DIODE,LED,CHIP	EDLH0004501	BLUE ,1608 ,R/TP ,		
7	R1	RES,CHIP	ERHY0003301	100 ohm,1/16W ,J ,1005 ,R/TP		
7	R2	RES,CHIP,MAKER	ERHZ0000458	300 ohm,1/16W ,J ,1005 ,R/TP		
7	SPFY00	PCB,FLEXIBLE	SPCY0104301	POLYI , mm,MULTI-3 , , ; , , , , , , , , ,		
7	VA1	VARISTOR	SEVY0004101	5.6 V , ,SMD ,360pF, 1005		
7	VA2	VARISTOR	SEVY0004101	5.6 V , ,SMD ,360pF, 1005		
4	SUMY00	VIBRATOR,MOTOR	SJMY0007202	3 V ,.08 A,12*3.4 ,17mm		
4	SUSY00	SPEAKER	SUSY0026501	ASSY ,8 ohm,91 dB,17 mm, , ; , , , , , , , WIRE		
4	SVLM00	LCD MODULE	SVLM0024701	MAIN ,1.52"(128*128) ,35.78*39.7*2.8 ,65k ,CSTN ,TM ,NT7573 ,Single		C
3	ACGM00	COVER ASSY,REAR	ACGM0091201		Black	N
4	ENZY00	CONNECTOR,ETC	ENZY0015701	3 PIN,3 mm,ETC , , H=6.5		34
4	MCCC00	CAP,EARPHONE JACK	MCCC0045401	MOLD, Urethane Rubber S190A, , , , ,	Silver	
4	MCJN00	COVER,REAR	MCJN0068501	MOLD, PC LUPOY SC-1004A, , , , ,	Silver	35
4	MLAB00	LABEL,A/S	MLAB0001102	C2000 USASV DIA 4.0	White	40
4	MPBF00	PAD,FLEXIBLE PCB	MPBF0021701	COMPLEX, (empty), , , , ,	Without Color	
4	MPBH00	PAD,MIKE	MPBH0030701	COMPLEX, (empty), , , , ,	Without Color	33
4	SNGF00	ANTENNA,GSM,FIXED	SNGF0026201	3.0 , -2.0 dBd , Internal ; , DUAL , -2.0 ,50 ,3.0		
3	GMEY00	SCREW MACHINE,BIND	GMEY0002001	1.4 mm,3 mm,MSWR3(BK) ,B ,+ ,HEAD t=0.6, HEAD d2.7		F, 41
3	MBJA00	BUTTON,DIAL	MBJA0024501	MOLD, Silicone Rubber KE971-U, , , , ,	Black	K
3	MLAK00	LABEL,MODEL	MLAK0006901			
5	MLAZ00	LABEL	MLAZ0038301	PID Label 4 Array	Without Color	
7	MCBA00	CAN,SHIELD	MCBA0019001	PRESS, STS, 0.2, , , ,	Without Color	

## 12. EXPLODED VIEW & REPLACEMENT PART LIST

---

Level	Location No.	Description	Part Number	Spec	Color	Remark
7	MCBA01	CAN,SHIELD	MCBA0021901	PRESS, STS, 0.2, , , ,	Without Color	

## 12. EXPLODED VIEW & REPLACEMENT PART LIST

### <Main component>

**Note:** This Chapter is used for reference, Part order is ordered by SBOM standard on GCSC

Level	Location No.	Description	Part Number	Spec	Color	Remark
3	SAFY00	PCB ASSY,MAIN	SAFY0210802			M
4	SAFB00	PCB ASSY,MAIN,INSERT	SAFB0075501			
5	ADCA00	DOVE ASSY,METAL	ADCA0067001		Without Color	L
5	SUMY00	MICROPHONE	SUMY0003802	FPCB , -42 dB,4*1.5 ,		
4	SAFF00	PCB ASSY,MAIN,SMT	SAFF0133902			
5	SAFC00	PCB ASSY,MAIN,SMT BOTTOM	SAFC0092702			
6	BAT100	BATTERY,CELL,LITHIUM	SBCL0001701	2 V,0.5 mAh,CYLINDER ,Reflow type BB, Max T 1.67, phi 4.8, Pb-Free		
6	C100	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C101	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C102	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C103	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C104	CAP,CERAMIC,CHIP	ECCH0007801	4.7 uF,10V ,Z ,Y5V ,HD ,1608 ,R/TP		
6	C105	CAP,CERAMIC,CHIP	ECCH0005602	2.2 uF,16V ,K ,X5R ,HD ,1608 ,R/TP		
6	C106	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C107	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C108	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C109	CAP,CERAMIC,CHIP	ECCH0000182	0.1 uF,10V ,K ,X5R ,HD ,1005 ,R/TP		
6	C110	CAP,CHIP,MAKER	ECZH0001216	220 nF,10V ,K ,X5R ,TC ,1005 ,R/TP		
6	C111	CAP,CERAMIC,CHIP	ECCH0000182	0.1 uF,10V ,K ,X5R ,HD ,1005 ,R/TP		
6	C112	CAP,CERAMIC,CHIP	ECCH0000182	0.1 uF,10V ,K ,X5R ,HD ,1005 ,R/TP		
6	C113	CAP,CERAMIC,CHIP	ECCH0000143	1 nF,50V,K,X7R,HD,1005,R/TP		
6	C114	CAP,CERAMIC,CHIP	ECCH0000143	1 nF,50V,K,X7R,HD,1005,R/TP		
6	C115	CAP,CERAMIC,CHIP	ECCH0000137	330 pF,50V ,K ,X7R ,HD ,1005 ,R/TP		
6	C116	CAP,CHIP,MAKER	ECZH0001216	220 nF,10V ,K ,X5R ,TC ,1005 ,R/TP		
6	C117	CAP,CHIP,MAKER	ECZH0001216	220 nF,10V ,K ,X5R ,TC ,1005 ,R/TP		
6	C118	CAP,CHIP,MAKER	ECZH0001216	220 nF,10V ,K ,X5R ,TC ,1005 ,R/TP		
6	C119	CAP,CERAMIC,CHIP	ECCH0000137	330 pF,50V ,K ,X7R ,HD ,1005 ,R/TP		
6	C120	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C121	CAP,CERAMIC,CHIP	ECCH0000113	18 pF,50V,J,NP0,TC,1005,R/TP		
6	C122	CAP,CERAMIC,CHIP	ECCH0000113	18 pF,50V,J,NP0,TC,1005,R/TP		
6	C123	CAP,CERAMIC,CHIP	ECCH0000115	22 pF,50V,J,NP0,TC,1005,R/TP		

## 12. EXPLODED VIEW & REPLACEMENT PART LIST

Level	Location No.	Description	Part Number	Spec	Color	Remark
6	C124	CAP,CERAMIC,CHIP	ECCH0000182	0.1 uF,10V ,K ,X5R ,HD ,1005 ,R/TP		
6	C125	CAP,CERAMIC,CHIP	ECCH0000115	22 pF,50V,J,NP0,TC,1005,R/TP		
6	C126	CAP,CHIP,MAKER	ECZH0001213	0.47 uF,6.3V ,Z ,Y5V ,TC ,1005 ,R/TP		
6	C127	CAP,CERAMIC,CHIP	ECCH0005602	2.2 uF,16V ,K ,X5R ,HD ,1608 ,R/TP		
6	C128	CAP,CHIP,MAKER	ECZH0000813	100 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		
6	C129	CAP,CHIP,MAKER	ECZH0000813	100 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		
6	C130	CAP,CERAMIC,CHIP	ECCH0000182	0.1 uF,10V ,K ,X5R ,HD ,1005 ,R/TP		
6	C131	CAP,CHIP,MAKER	ECZH0000813	100 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		
6	C132	CAP,CHIP,MAKER	ECZH0000813	100 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		
6	C138	CAP,CERAMIC,CHIP	ECCH0000182	0.1 uF,10V ,K ,X5R ,HD ,1005 ,R/TP		
6	C139	CAP,CERAMIC,CHIP	ECCH0002002	47000 pF,10V ,K ,B ,HD ,1005 ,R/TP		
6	C140	CAP,CERAMIC,CHIP	ECCH0000153	6.8 nF,25V,K,X7R,HD,1005,R/TP		
6	C141	CAP,CHIP,MAKER	ECZH0001106	4700 pF,25V ,K ,X7R ,HD ,1005 ,R/TP		
6	C142	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C143	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C144	CAP,CHIP,MAKER	ECZH0001106	4700 pF,25V ,K ,X7R ,HD ,1005 ,R/TP		
6	C145	CAP,CERAMIC,CHIP	ECCH0000143	1 nF,50V,K,X7R,HD,1005,R/TP		
6	C200	CAP,CERAMIC,CHIP	ECCH0000182	0.1 uF,10V ,K ,X5R ,HD ,1005 ,R/TP		
6	C202	CAP,CERAMIC,CHIP	ECCH0000182	0.1 uF,10V ,K ,X5R ,HD ,1005 ,R/TP		
6	C203	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C204	CAP,CERAMIC,CHIP	ECCH0000182	0.1 uF,10V ,K ,X5R ,HD ,1005 ,R/TP		
6	C205	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C206	CAP,CERAMIC,CHIP	ECCH0000120	39 pF,50V,J,NP0,TC,1005,R/TP		
6	C207	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C208	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C209	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C210	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C211	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C212	CAP,CERAMIC,CHIP	ECCH0000120	39 pF,50V,J,NP0,TC,1005,R/TP		
6	C213	CAP,CERAMIC,CHIP	ECCH0000393	22 uF,6.3V ,M ,X5R ,HD ,2012 ,R/TP		
6	C215	CAP,CERAMIC,CHIP	ECCH0000393	22 uF,6.3V ,M ,X5R ,HD ,2012 ,R/TP		
6	C217	CAP,CHIP,MAKER	ECZH0001421	2.2 uF,6.3V ,K ,X5R ,HD ,1608 ,R/TP		
6	C218	CAP,CHIP,MAKER	ECZH0000826	27 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		
6	C219	CAP,CHIP,MAKER	ECZH0000826	27 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		
6	C220	CAP,CERAMIC,CHIP	ECCH0000182	0.1 uF,10V ,K ,X5R ,HD ,1005 ,R/TP		
6	C221	CAP,CERAMIC,CHIP	ECCH0000143	1 nF,50V,K,X7R,HD,1005,R/TP		

## 12. EXPLODED VIEW & REPLACEMENT PART LIST

Level	Location No.	Description	Part Number	Spec	Color	Remark
6	C222	CAP,CERAMIC,CHIP	ECCH0000259	10 nF,50V,K,X7R,HD,1608,R/TP		
6	C223	CAP,CERAMIC,CHIP	ECCH0000182	0.1 uF,10V ,K ,X5R ,HD ,1005 ,R/TP		
6	C226	CAP,CERAMIC,CHIP	ECCH0000120	39 pF,50V,J,NP0,TC,1005,R/TP		
6	C227	CAP,CERAMIC,CHIP	ECCH0000120	39 pF,50V,J,NP0,TC,1005,R/TP		
6	C228	CAP,CERAMIC,CHIP	ECCH0006501	10 uF,6.3V ,K ,X5R ,TC ,2012 ,R/TP		
6	C229	CAP,CERAMIC,CHIP	ECCH0000182	0.1 uF,10V ,K ,X5R ,HD ,1005 ,R/TP		
6	C230	CAP,CERAMIC,CHIP	ECCH0000113	18 pF,50V,J,NP0,TC,1005,R/TP		
6	C231	CAP,CERAMIC,CHIP	ECCH0000120	39 pF,50V,J,NP0,TC,1005,R/TP		
6	C232	CAP,CERAMIC,CHIP	ECCH0000182	0.1 uF,10V ,K ,X5R ,HD ,1005 ,R/TP		
6	C233	CAP,CERAMIC,CHIP	ECCH0000391	1 uF,50V ,Z ,Y5V ,HD ,2012 ,R/TP		
6	C234	CAP,CERAMIC,CHIP	ECCH0000182	0.1 uF,10V ,K ,X5R ,HD ,1005 ,R/TP		
6	C235	CAP,CERAMIC,CHIP	ECCH0000120	39 pF,50V,J,NP0,TC,1005,R/TP		
6	C236	CAP,CHIP,MAKER	ECZH0000826	27 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		
6	C237	CAP,CHIP,MAKER	ECZH0000826	27 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		
6	C238	CAP,CERAMIC,CHIP	ECCH0007801	4.7 uF,10V ,Z ,Y5V ,HD ,1608 ,R/TP		
6	C239	CAP,CHIP,MAKER	ECZH0000826	27 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		
6	C240	CAP,CERAMIC,CHIP	ECCH0000182	0.1 uF,10V ,K ,X5R ,HD ,1005 ,R/TP		
6	C241	CAP,CERAMIC,CHIP	ECCH0000182	0.1 uF,10V ,K ,X5R ,HD ,1005 ,R/TP		
6	C242	CAP,CHIP,MAKER	ECZH0000813	100 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		
6	C300	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C301	CAP,CHIP,MAKER	ECZH0000813	100 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		
6	C302	CAP,CHIP,MAKER	ECZH0001216	220 nF,10V ,K ,X5R ,TC ,1005 ,R/TP		
6	C303	CAP,CHIP,MAKER	ECZH0001216	220 nF,10V ,K ,X5R ,TC ,1005 ,R/TP		
6	C304	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C305	CAP,CERAMIC,CHIP	ECCH0000182	0.1 uF,10V ,K ,X5R ,HD ,1005 ,R/TP		
6	C306	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C307	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C308	CAP,CERAMIC,CHIP	ECCH0000182	0.1 uF,10V ,K ,X5R ,HD ,1005 ,R/TP		
6	C309	CAP,CERAMIC,CHIP	ECCH0000182	0.1 uF,10V ,K ,X5R ,HD ,1005 ,R/TP		
6	C310	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C311	CAP,CERAMIC,CHIP	ECCH0000182	0.1 uF,10V ,K ,X5R ,HD ,1005 ,R/TP		
6	C400	CAP,CERAMIC,CHIP	ECCH0003002	10 uF,10V ,Z ,Y5V ,HD ,2012 ,R/TP		
6	C401	CAP,CHIP,MAKER	ECZH0000816	12 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		
6	C402	CAP,CERAMIC,CHIP	ECCH0000155	10 nF,16V,K,X7R,HD,1005,R/TP		
6	C403	CAP,CHIP,MAKER	ECZH0000830	33 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		
6	C404	CAP,CERAMIC,CHIP	ECCH0000113	18 pF,50V,J,NP0,TC,1005,R/TP		



## 12. EXPLODED VIEW & REPLACEMENT PART LIST

Level	Location No.	Description	Part Number	Spec	Color	Remark
6	C405	CAP,CHIP,MAKER	ECZH0000826	27 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		
6	C406	CAP,CERAMIC,CHIP	ECCH0000155	10 nF,16V,K,X7R,HD,1005,R/TP		
6	C408	CAP,CERAMIC,CHIP	ECCH0000120	39 pF,50V,J,NP0,TC,1005,R/TP		
6	C409	CAP,CHIP,MAKER	ECZH0000813	100 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		
6	C410	CAP,CHIP,MAKER	ECZH0000813	100 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		
6	C412	CAP,CERAMIC,CHIP	ECCH0000183	1.8 pF,50V ,C ,NP0 ,TC ,1005 ,R/TP		
6	C413	CAP,CHIP,MAKER	ECZH0000802	1 pF,50V ,C ,NP0 ,TC ,1005 ,R/TP		
6	C414	CAP,CHIP,MAKER	ECZH0000826	27 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		
6	C415	CAP,CHIP,MAKER	ECZH0000826	27 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		
6	C416	CAP,CHIP,MAKER	ECZH0000813	100 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		
6	C418	CAP,CERAMIC,CHIP	ECCH0000901	2.2 pF,50V ,C ,NP0 ,TC ,1005 ,R/TP		
6	C419	CAP,CERAMIC,CHIP	ECCH0000104	3 pF,50V,C,NP0,TC,1005,R/TP		
6	C420	CAP,CERAMIC,CHIP	ECCH0000115	22 pF,50V,J,NP0,TC,1005,R/TP		
6	C421	CAP,CERAMIC,CHIP	ECCH0000104	3 pF,50V,C,NP0,TC,1005,R/TP		
6	C422	CAP,CERAMIC,CHIP	ECCH0000104	3 pF,50V,C,NP0,TC,1005,R/TP		
6	C423	CAP,CHIP,MAKER	ECZH0000826	27 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		
6	C424	CAP,CHIP,MAKER	ECZH0000826	27 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		
6	C425	CAP,CERAMIC,CHIP	ECCH0000104	3 pF,50V,C,NP0,TC,1005,R/TP		
6	CN200	CONNECTOR,BOARD TO BOARD	ENBY0040701	30 PIN, mm,ETC , , , , ,0.40MM ,STRAIGHT ,FEMALE ,SMD ,R/TP ,1.0 ,		
6	CN201	CONNECTOR,I/O	ENRY0006401	18 PIN,0.4 mm,ANGLE , ,H=2.5, Reverse Type		
6	FB100	FILTER,BEAD,CHIP	SFBH0007102	10 ohm,1005 ,Ferrite Bead		
6	FB200	FILTER,BEAD,CHIP	SFBH0007102	10 ohm,1005 ,Ferrite Bead		
6	FB201	FILTER,BEAD,CHIP	SFBH0007102	10 ohm,1005 ,Ferrite Bead		
6	FL200	VARISTOR	SEVY0007001	18 V,- ,SMD ,6ch, 100ohm, EMI Filter Array chip varistor		
6	FL201	VARISTOR	SEVY0007001	18 V,- ,SMD ,6ch, 100ohm, EMI Filter Array chip varistor		
6	FL400	FILTER,SAW,DUAL	SFSB0001301	881.5 MHz,25 MHz,1.8 dB,30 dB,1960 MHz,60 MHz,2.3 dB,12 dB,2.0*1.6*0.68 ,SMD ,869M~894M,1930M~1990M,10p,B,150_82,150_18,GSM 850+PCS Rx , , ,881.5, 1960 ,2.0*1.6*0.68 ,SMD ,R/TP		
6	FL401	FILTER,SEPERATOR	SFAY0010101	850.1900 ,900.1800 ,2.0 dB,2.0 dB,2.0 dB,2.0 dB,ETC ,Dual Band ASM, 2.5x2.5x1.2		
6	J100	CONN,SOCKET	ENSY0014601	6 PIN,ETC , ,2.54 mm,H=2.3		
6	L200	INDUCTOR,CHIP	ELCH0005009	100 nH,J ,1005 ,R/TP ,		
6	L201	INDUCTOR,CHIP	ELCH0005009	100 nH,J ,1005 ,R/TP ,		
6	L202	INDUCTOR,CHIP	ELCH0005009	100 nH,J ,1005 ,R/TP ,		
6	L204	INDUCTOR,CHIP	ELCH0010302	100 nH,J ,1608 ,R/TP ,chip coil		

## 12. EXPLODED VIEW & REPLACEMENT PART LIST

Level	Location No.	Description	Part Number	Spec	Color	Remark
6	L205	RES,CHIP,MAKER	ERHZ0000404	1 Kohm,1/16W ,J ,1005 ,R/TP		
6	L206	RES,CHIP,MAKER	ERHZ0000404	1 Kohm,1/16W ,J ,1005 ,R/TP		
6	L400	INDUCTOR,CHIP	ELCH0004711	22 nH,J ,1005 ,R/TP ,		
6	L401	INDUCTOR,CHIP	ELCH0004707	1.5 nH,S ,1005 ,R/TP ,		
6	L402	INDUCTOR,CHIP	ELCH0004708	2.7 nH,S ,1005 ,R/TP ,		
6	L403	INDUCTOR,CHIP	ELCH0004726	1.5 nH,J ,1005 ,R/TP ,		
6	L404	INDUCTOR,CHIP	ELCH0009110	5.1 nH,J ,1005 ,R/TP ,chip coil		
6	L405	INDUCTOR,CHIP	ELCH0004714	18 nH,J ,1005 ,R/TP ,		
6	Q100	TR,BJT,ARRAY	EQBA0000406	SC-70 ,0.2 W,R/TP ,CDMA,Common use		
6	Q101	TR,BJT,NPN	EQBN0007601	SOT-23 ,0.15 W,R/TP ,EMT3		
6	Q102	TR,BJT,PNP	EQBP0006402	VSM ,100 mW,R/TP ,EPITAXIAL PLANAR PNP TRANSISTOR		
6	Q200	TR,BJT,ARRAY	EQBA0004902	TES6 ,200 mW,R/TP ,NPN/PNP dual, Vo1=50V, Io1=100mA, Vo2=-50V,Io2=-100mA		
6	R100	RES,CHIP,MAKER	ERHZ0000244	22 Kohm,1/16W ,F ,1005 ,R/TP		
6	R101	RES,CHIP,MAKER	ERHZ0000406	100 Kohm,1/16W ,J ,1005 ,R/TP		
6	R102	RES,CHIP,MAKER	ERHZ0000406	100 Kohm,1/16W ,J ,1005 ,R/TP		
6	R103	RES,CHIP,MAKER	ERHZ0000203	10 Kohm,1/16W ,F ,1005 ,R/TP		
6	R104	RES,CHIP,MAKER	ERHZ0000507	68 Kohm,1/16W ,J ,1005 ,R/TP		
6	R105	RES,CHIP,MAKER	ERHZ0000406	100 Kohm,1/16W ,J ,1005 ,R/TP		
6	R106	RES,CHIP,MAKER	ERHZ0000486	47 Kohm,1/16W ,J ,1005 ,R/TP		
6	R107	RES,CHIP,MAKER	ERHZ0000438	20 Kohm,1/16W ,J ,1005 ,R/TP		
6	R108	RES,CHIP	ERHY0000278	82K ohm,1/16W,J,1005,R/TP		
6	R109	RES,CHIP,MAKER	ERHZ0000438	20 Kohm,1/16W ,J ,1005 ,R/TP		
6	R110	RES,CHIP,MAKER	ERHZ0000438	20 Kohm,1/16W ,J ,1005 ,R/TP		
6	R111	RES,CHIP,MAKER	ERHZ0000406	100 Kohm,1/16W ,J ,1005 ,R/TP		
6	R112	RES,CHIP,MAKER	ERHZ0000206	10 ohm,1/16W ,F ,1005 ,R/TP		
6	R113	RES,CHIP,MAKER	ERHZ0000485	4700 ohm,1/16W ,J ,1005 ,R/TP		
6	R114	RES,CHIP	ERHY0000278	82K ohm,1/16W,J,1005,R/TP		
6	R115	RES,CHIP,MAKER	ERHZ0000206	10 ohm,1/16W ,F ,1005 ,R/TP		
6	R116	RES,CHIP,MAKER	ERHZ0000406	100 Kohm,1/16W ,J ,1005 ,R/TP		
6	R117	RES,CHIP,MAKER	ERHZ0000406	100 Kohm,1/16W ,J ,1005 ,R/TP		
6	R118	RES,CHIP,MAKER	ERHZ0000405	10 Kohm,1/16W ,J ,1005 ,R/TP		
6	R119	RES,CHIP,MAKER	ERHZ0000405	10 Kohm,1/16W ,J ,1005 ,R/TP		
6	R130	RES,CHIP,MAKER	ERHZ0000406	100 Kohm,1/16W ,J ,1005 ,R/TP		
6	R131	RES,CHIP,MAKER	ERHZ0000406	100 Kohm,1/16W ,J ,1005 ,R/TP		
6	R132	RES,CHIP,MAKER	ERHZ0000405	10 Kohm,1/16W ,J ,1005 ,R/TP		

## 12. EXPLODED VIEW & REPLACEMENT PART LIST

Level	Location No.	Description	Part Number	Spec	Color	Remark
6	R133	RES,CHIP,MAKER	ERHZ0000406	100 Kohm,1/16W ,J ,1005 ,R/TP		
6	R136	RES,CHIP,MAKER	ERHZ0000506	6800 ohm,1/16W ,J ,1005 ,R/TP		
6	R137	RES,CHIP,MAKER	ERHZ0000406	100 Kohm,1/16W ,J ,1005 ,R/TP		
6	R138	RES,CHIP,MAKER	ERHZ0000477	390 Kohm,1/16W ,J ,1005 ,R/TP		
6	R139	RES,CHIP,MAKER	ERHZ0000406	100 Kohm,1/16W ,J ,1005 ,R/TP		
6	R200	RES,CHIP,MAKER	ERHZ0000529	1.5 Kohm,1/16W ,J ,1005 ,R/TP		
6	R201	RES,CHIP,MAKER	ERHZ0000443	2200 ohm,1/16W ,J ,1005 ,R/TP		
6	R202	RES,CHIP,MAKER	ERHZ0000406	100 Kohm,1/16W ,J ,1005 ,R/TP		
6	R203	RES,CHIP,MAKER	ERHZ0000406	100 Kohm,1/16W ,J ,1005 ,R/TP		
6	R204	RES,CHIP,MAKER	ERHZ0000406	100 Kohm,1/16W ,J ,1005 ,R/TP		
6	R205	RES,CHIP,MAKER	ERHZ0000488	4.7 ohm,1/16W ,J ,1005 ,R/TP		
6	R206	RES,CHIP,MAKER	ERHZ0000488	4.7 ohm,1/16W ,J ,1005 ,R/TP		
6	R207	RES,CHIP,MAKER	ERHZ0000483	47 ohm,1/16W ,J ,1005 ,R/TP		
6	R208	RES,CHIP,MAKER	ERHZ0000483	47 ohm,1/16W ,J ,1005 ,R/TP		
6	R209	RES,CHIP,MAKER	ERHZ0000483	47 ohm,1/16W ,J ,1005 ,R/TP		
6	R210	RES,CHIP,MAKER	ERHZ0000406	100 Kohm,1/16W ,J ,1005 ,R/TP		
6	R211	RES,CHIP,MAKER	ERHZ0000404	1 Kohm,1/16W ,J ,1005 ,R/TP		
6	R212	RES,CHIP,MAKER	ERHZ0000483	47 ohm,1/16W ,J ,1005 ,R/TP		
6	R215	RES,CHIP,MAKER	ERHZ0000404	1 Kohm,1/16W ,J ,1005 ,R/TP		
6	R216	RES,CHIP,MAKER	ERHZ0000404	1 Kohm,1/16W ,J ,1005 ,R/TP		
6	R217	RES,CHIP,MAKER	ERHZ0000404	1 Kohm,1/16W ,J ,1005 ,R/TP		
6	R218	RES,CHIP,MAKER	ERHZ0000405	10 Kohm,1/16W ,J ,1005 ,R/TP		
6	R219	RES,CHIP,MAKER	ERHZ0000443	2200 ohm,1/16W ,J ,1005 ,R/TP		
6	R220	RES,CHIP	ERHY0003401	1800 ohm,1/16W ,J ,1005 ,R/TP		
6	R221	RES,CHIP,MAKER	ERHZ0000443	2200 ohm,1/16W ,J ,1005 ,R/TP		
6	R222	RES,CHIP,MAKER	ERHZ0000406	100 Kohm,1/16W ,J ,1005 ,R/TP		
6	R224	RES,CHIP,MAKER	ERHZ0000450	240 Kohm,1/16W ,J ,1005 ,R/TP		
6	R225	RES,CHIP,MAKER	ERHZ0000460	30 Kohm,1/16W ,J ,1005 ,R/TP		
6	R226	RES,CHIP,MAKER	ERHZ0000435	20 ohm,1/16W ,J ,1005 ,R/TP		
6	R234	RES,CHIP,MAKER	ERHZ0000404	1 Kohm,1/16W ,J ,1005 ,R/TP		
6	R294	CAP,CHIP,MAKER	ECZH0000826	27 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		
6	R295	CAP,CHIP,MAKER	ECZH0000826	27 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		
6	R296	INDUCTOR,CHIP	ELCH0005009	100 nH,J ,1005 ,R/TP ,		
6	R297	CAP,CHIP,MAKER	ECZH0000826	27 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		
6	R298	CAP,CHIP,MAKER	ECZH0000826	27 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		
6	R299	CAP,CHIP,MAKER	ECZH0000826	27 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		

## 12. EXPLODED VIEW & REPLACEMENT PART LIST

Level	Location No.	Description	Part Number	Spec	Color	Remark
6	R300	RES,CHIP,MAKER	ERHZ0000476	39 Kohm,1/16W ,J ,1005 ,R/TP		
6	R301	RES,CHIP,MAKER	ERHZ0000438	20 Kohm,1/16W ,J ,1005 ,R/TP		
6	R302	RES,CHIP,MAKER	ERHZ0000438	20 Kohm,1/16W ,J ,1005 ,R/TP		
6	R303	RES,CHIP,MAKER	ERHZ0000476	39 Kohm,1/16W ,J ,1005 ,R/TP		
6	R304	RES,CHIP,MAKER	ERHZ0000405	10 Kohm,1/16W ,J ,1005 ,R/TP		
6	R305	RES,CHIP,MAKER	ERHZ0000406	100 Kohm,1/16W ,J ,1005 ,R/TP		
6	R306	RES,CHIP,MAKER	ERHZ0000485	4700 ohm,1/16W ,J ,1005 ,R/TP		
6	R307	RES,CHIP,MAKER	ERHZ0000485	4700 ohm,1/16W ,J ,1005 ,R/TP		
6	R309	RES,CHIP,MAKER	ERHZ0000406	100 Kohm,1/16W ,J ,1005 ,R/TP		
6	R310	RES,CHIP,MAKER	ERHZ0000454	27 Kohm,1/16W ,J ,1005 ,R/TP		
6	R403	RES,CHIP,MAKER	ERHZ0000404	1 Kohm,1/16W ,J ,1005 ,R/TP		
6	SC400	CAN ASSY,SHIELD	ACKA0002801		Without Color	
6	SW400	CONN,RF SWITCH	ENWY0004401	,SMD , dB,H=2.2		
6	U100	IC	EUSY0304302	64Mb NOR63 3V+utRAM32Mb ,56 PIN,R/TP ,W7 L9 H1.2		
6	U101	IC	EUSY0176402	Flip-Chip CSP ,9 PIN,R/TP ,Audio Power Amplifier		
6	U102	IC	EUSY0300101	WQFN ,10 PIN,R/TP ,Small package Dual SPDT analog Switch, PB-Free		
6	U103	IC	EUSY0317401	BGA ,189 PIN,R/TP ,E-Gold voice		
6	U200	IC	EUSY0238702	TSOPJW-12 ,12 PIN,R/TP ,3PORT Charge Pump(AAT2154 Low cost version)		
6	U201	IC	EUSY0292601	DFN ,8 PIN,R/TP ,Li-ion charger IC, 8 Ld 2 x 3 DFN, Pb-free		
6	U300	IC	EUSY0320801	QFN ,20 PIN,R/TP ,FM Tuner Chip, 3*3*0.57, Pb Free		
6	U301	IC	EUSY0142501	LLP ,8 PIN,R/TP ,Dual 105mW Headphone Amplifier		
6	U302	IC	EUSY0223002	HVSOF5 ,5 PIN,R/TP ,150mA CMOS LDO WITH OUTPUT CONTROL / 2.8V		
6	U303	IC	EUSY0300101	WQFN ,10 PIN,R/TP ,Small package Dual SPDT analog Switch, PB-Free		
6	U400	PAM	SMPY0014001	35.5 dBm,56 % , A, dBc, dB,6x6x1.15 ,SMD ,Tri Band		
6	VA200	VARISTOR	SEVY0004101	5.6 V , ,SMD ,360pF, 1005		
6	VA201	VARISTOR	SEVY0004101	5.6 V , ,SMD ,360pF, 1005		
6	VA202	VARISTOR	SEVY0004101	5.6 V , ,SMD ,360pF, 1005		
6	VA203	VARISTOR	SEVY0003801	18 V , ,SMD ,		
6	VA204	VARISTOR	SEVY0003801	18 V , ,SMD ,		
6	VA205	VARISTOR	SEVY0003801	18 V , ,SMD ,		
6	VA206	VARISTOR	SEVY0003801	18 V , ,SMD ,		
6	VA207	VARISTOR	SEVY0003801	18 V , ,SMD ,		
6	VA208	VARISTOR	SEVY0003801	18 V , ,SMD ,		

## 12. EXPLODED VIEW & REPLACEMENT PART LIST

Level	Location No.	Description	Part Number	Spec	Color	Remark
6	VA209	VARISTOR	SEVY0004101	5.6 V, ,SMD ,360pF, 1005		
6	VA210	VARISTOR	SEVY0004101	5.6 V, ,SMD ,360pF, 1005		
6	X100	X-TAL	EXXY0018404	26 MHz,10 PPM,8 pF,40 ohm,SMD ,3.2*2.5*0.6 ,12ppm at -30°C ~ +85°C, C0 1.0pF, C1 3.6fF ,; ,26 ,10PPM ,8 , ,SMD ,R/TP		
6	X101	X-TAL	EXXY0004602	.032768 MHz,20 PPM,12.5 pF,65000 ohm,SMD ,6.9*1.4*1.3 ,		
5	SAFD00	PCB ASSY,MAIN,SMT TOP	SAFD0091902			
6	C133	CAP,CHIP,MAKER	ECZH0001215	1 uF,10V ,K ,X5R ,TC ,1005 ,R/TP		
6	C134	CAP,CHIP,MAKER	ECZH0001215	1 uF,10V ,K ,X5R ,TC ,1005 ,R/TP		
6	C135	CAP,CHIP,MAKER	ECZH0000826	27 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		
6	C136	CAP,CHIP,MAKER	ECZH0000826	27 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		
6	C137	CAP,CERAMIC,CHIP	ECCH0000182	0.1 uF,10V ,K ,X5R ,HD ,1005 ,R/TP		
6	LD100	DIODE,LED,CHIP	EDLH0004501	BLUE ,1608 ,R/TP ,		
6	LD101	DIODE,LED,CHIP	EDLH0004501	BLUE ,1608 ,R/TP ,		
6	LD102	DIODE,LED,CHIP	EDLH0004501	BLUE ,1608 ,R/TP ,		
6	LD103	DIODE,LED,CHIP	EDLH0004501	BLUE ,1608 ,R/TP ,		
6	LD104	DIODE,LED,CHIP	EDLH0004501	BLUE ,1608 ,R/TP ,		
6	LD105	DIODE,LED,CHIP	EDLH0004501	BLUE ,1608 ,R/TP ,		
6	LD106	DIODE,LED,CHIP	EDLH0004501	BLUE ,1608 ,R/TP ,		
6	LD107	DIODE,LED,CHIP	EDLH0004501	BLUE ,1608 ,R/TP ,		
6	LD108	DIODE,LED,CHIP	EDLH0004501	BLUE ,1608 ,R/TP ,		
6	LD109	DIODE,LED,CHIP	EDLH0004501	BLUE ,1608 ,R/TP ,		
6	R120	RES,CHIP	ERHY0003301	100 ohm,1/16W ,J ,1005 ,R/TP		
6	R121	RES,CHIP	ERHY0003301	100 ohm,1/16W ,J ,1005 ,R/TP		
6	R122	RES,CHIP	ERHY0003301	100 ohm,1/16W ,J ,1005 ,R/TP		
6	R123	RES,CHIP	ERHY0003301	100 ohm,1/16W ,J ,1005 ,R/TP		
6	R124	RES,CHIP	ERHY0003301	100 ohm,1/16W ,J ,1005 ,R/TP		
6	R125	RES,CHIP	ERHY0003301	100 ohm,1/16W ,J ,1005 ,R/TP		
6	R126	RES,CHIP	ERHY0003301	100 ohm,1/16W ,J ,1005 ,R/TP		
6	R127	RES,CHIP	ERHY0003301	100 ohm,1/16W ,J ,1005 ,R/TP		
6	R128	RES,CHIP	ERHY0003301	100 ohm,1/16W ,J ,1005 ,R/TP		
6	R129	RES,CHIP	ERHY0003301	100 ohm,1/16W ,J ,1005 ,R/TP		
6	R227	RES,CHIP,MAKER	ERHZ0000505	680 ohm,1/16W ,J ,1005 ,R/TP		
6	R228	RES,CHIP,MAKER	ERHZ0000505	680 ohm,1/16W ,J ,1005 ,R/TP		
6	R229	RES,CHIP,MAKER	ERHZ0000505	680 ohm,1/16W ,J ,1005 ,R/TP		
6	R230	RES,CHIP,MAKER	ERHZ0000505	680 ohm,1/16W ,J ,1005 ,R/TP		

## 12. EXPLODED VIEW & REPLACEMENT PART LIST

---

Level	Location No.	Description	Part Number	Spec	Color	Remark
6	R231	RES,CHIP,MAKER	ERHZ0000505	680 ohm,1/16W ,J ,1005 ,R/TP		
6	R232	RES,CHIP,MAKER	ERHZ0000505	680 ohm,1/16W ,J ,1005 ,R/TP		
6	R233	RES,CHIP,MAKER	ERHZ0000505	680 ohm,1/16W ,J ,1005 ,R/TP		
6	R235	RES,CHIP,MAKER	ERHZ0000505	680 ohm,1/16W ,J ,1005 ,R/TP		
6	R236	RES,CHIP,MAKER	ERHZ0000505	680 ohm,1/16W ,J ,1005 ,R/TP		
6	R237	RES,CHIP,MAKER	ERHZ0000505	680 ohm,1/16W ,J ,1005 ,R/TP		
6	SPFY00	PCB,MAIN	SPFY0153601	FR-4 ,0.8 mm,BUILD-UP 6 , , , , , , , , , ,		
6	U104	IC	EUSY0250001	Leaded ,4 PIN,R/TP ,Hall IC		

## 12. EXPLODED VIEW & REPLACEMENT PART LIST

### 12.3 Accessory

**Note:** This Chapter is used for reference, Part order is ordered by SBOM standard on GCSC

Level	Location No.	Description	Part Number	Spec	Color	Remark
3	SBPL00	BATTERY PACK,LI-ION	SBPL0089504	3.7 V,750 mAh,1 CELL,PRISMATIC ,WLT, BATT, Latin America Label, Pb-Free ,; ,3.7 ,750 ,0.2C ,PRISMATIC ,43x34x46 , ,BLACK ,Innerpack ,Latin America Label	Black	36, O
3	SGEY00	EAR PHONE/EAR MIKE SET	SGEY0003213	; ,10mW ,16 OHM ,105dB ,10KHZ ,450HZ ,[empty] ,BLACK,EARPHONE HOUSING:SILVER ,18P MMI CONNECTOR ,LOW COST STEREO,18P(5P) ,		
3	SSAD00	ADAPTOR,AC-DC	SSAD0024601	100-240V ,5060 Hz,5.1 V,7 A,NOM ,AC-DC ADAPTOR ,; ,85Vac~264Vac ,5.1V +0.15V, -0.2V ,700mA ,5060 , ,WALL 2P ,I/O CONNECTOR ,		